

product technical sheet

collection	YOU
code	EVYUAST2500FNO-EVYUAST2600FNO-EVYUAST2700FNO-EVYUAST2750FNO-EVYUAST2850FNO-EVYUAST3000FNO
description	Floor to ceiling pole 2,5 - 2,6 - 2,7 - 2,75 - 2,85 - 3 m
certifications	TUV system certification ISO 9001.
features	Floor/ceiling vertical pole Ø25mm made of s/s disassemblable with support bases in aluminium, adjustment 60mm.
size	<p>EVYUAST2500FNO: Asta 2500mm Hmin 2470mm, Hmax 2530mm. EVYUAST2600FNO: Asta 2600mm Hmin 2570mm, Hmax 2630mm. EVYUAST2700FNO: Asta 2700mm Hmin 2670mm, Hmax 2730mm. EVYUAST2750FNO: Asta 2750mm Hmin 2720mm, Hmax 2780mm. EVYUAST2850FNO: Asta 2850mm Hmin 2820mm, Hmax 2880mm. EVYUAST3000FNO: Asta 3000mm Hmin 2970mm, Hmax 3030mm.</p> <p>Special lengths only on request:</p> <p>EVYUAST2250FNO: Asta 2250mm Hmin 2220mm, Hmax 2280mm. EVYUAST2450FNO: Asta 2450mm Hmin 2420mm, Hmax 2480mm. EVYUAST2650FNO: Asta 2650mm Hmin 2620mm, Hmax 2680mm. EVYUAST2900FNO: Asta 2900mm Hmin 2870mm, Hmax 2930mm.</p> <p>For all the products: diameter tube: 25 mm diameter end: 62 mm</p>
installation	<p>Check the quality and solidity of the floor and ceiling before proceeding with the installation.</p> <p>Screw in the two pipes, tightening them until they touch the ring of the brass joint. Screw in the two bases into both sides of the assembled rod until the black joints are hidden. Continue screwing in only the base which will rest on the floor: count approximately 10 more rotations. Mark the contact areas on the ceiling and floor where YOU will be placed. Take the assembled rod, paying attention to its weight: place the upper base in contact with the area marked on the ceiling and meanwhile holding the lower tube still with one hand, unscrew the lower base with the other hand until it touches the floor: continue to rotate in the opposite direction until the product is slightly tensioned. Use a spirit level to check that the rod is perfectly vertical frontally and laterally. Put the rod under definitive tension by holding again the lower tube of the rod still with one hand and rotating the lower base in the opposite direction with the other hand until it can no longer turn: ATTENTION, depending on the type of the floor, during</p>

ST_PRODOTTO: EVYUAST - REV.00 of 26/02/2024 - 20/09/24 - APPROVED T.D.

product technical sheet

the tensioning phase, the lower base can slip and possibly compromise the verticality and robustness of the installation. **MAKE SURE THAT THE INSTALLATION IS PERFECTLY VERTICAL.** Always mount the first support at the connection point between the two pipes to have the joint hidden. Install other supports around the rod at the desired height, first screwing them in, then fixing them firmly by turning the ring clockwise. Screw in the accessories onto the threaded holes following the assembly instructions. Cover any unused holes in the support with the rubber covers provided in the package.

finishes	Painted mat black RAL 9011
maintenance	Make a proper cleaning with water and soap, do not use aggressive products, or abrasive, corrosive, acids, acetone, diluent etc. Do not scratch the surface. Check periodically the correct fixation of the installation and its solidity. Do not use the product for any other purpose. Avoid impacts with the product.
materials	Steel, painted aluminium.



ST_PRODOTTO: EVYUAST - REV.00 of 26/02/2024 - 20/09/24 - APPROVED T.D.